



Bunk Slicks Installation Instructions for #86170

1. With the boat on the trailer, determine the forward most point where the boat makes contact with the bunks.
2. Unload boat from the trailer.
3. Place Bunk Slick centered on the rear end of bunk so that the bunk slick is even with the end of the carpeted bunk.
4. Space Bunk Slicks on carpeted bunk and space evenly with no more than 6 inches between each Bunk Slick.
5. Area to be "covered" is from the rear end of the carpeted bunk to 5 inches past the most forward point where the boat hull comes in contact with the carpeted bunk (below).
6. Using the screws provided, attached the Bunk Slicks to the carpeted bunks.

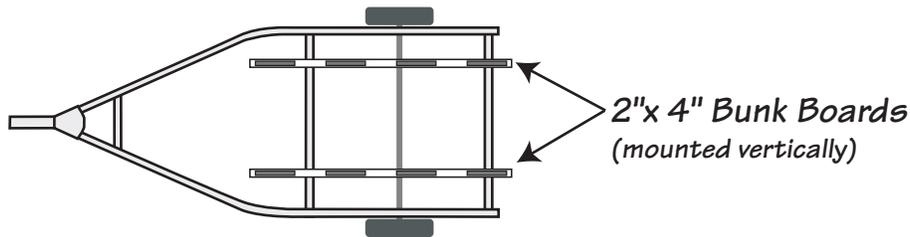

Installation Instructions for #86164

1. With the boat on the trailer, determine the forward most point where the boat makes contact with the bunks.
2. Unload boat from the trailer.
3. Place Bunk Slick centered on the rear end of bunk so that the bunk slick is even with the end of the carpeted bunk.
4. Space Bunk Slicks on carpeted bunk and space evenly with no more than 6 inches between each Bunk Slick.
5. Area to be "covered" is from the rear end of the carpeted bunk to 5 inches past the most forward point where the boat hull comes in contact with the carpeted bunk (below).
6. Using the screws provided, attached the Bunk Slicks to the carpeted bunks.

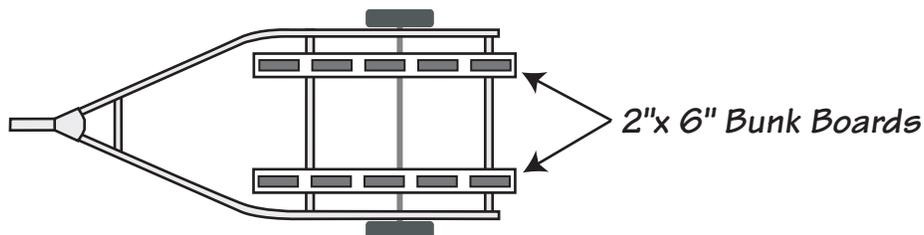

⚠ WARNING ⚠ WARNING ⚠ WARNING ⚠

Bunk Slicks greatly reduce friction between boat and trailer bunk boards. Winch must be locked and winch line must be securely attached when launching, loading and transporting boat on trailer. Failure to keep boat secured at all times to boat trailer can result in serious property damage, personal injury and/or possible death. Prior to towing, always securely connect winch line, bow chain and transom tie down straps.